


Kama Panel Installation Manual

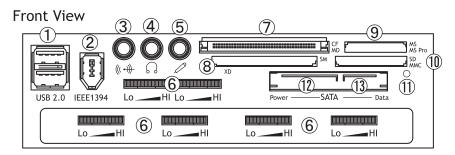

①USB2.0 x 2 ②IEEE1394 x 1 ③Line IN x 1 4 Audio OUT x 1 5Mic IN x 1 6Fan Controller x 6 Compact Flash, Micro Drive (8)xD Picture Card, Smart Media

Memory Stick(Include PRO), Memory Stick(DUO, PRO-DUO)(Requires Adapter)

(D)SD Card, SDHC Card, Mini SD(Requires Adapter), Multi Media Card(MMC), RS-MMC(Requires Adapter)

11)Power and Access LED

[®]S-ATA Power x 1

(13)S-ATA Data x 1

Direction to Insert Media Card Insert to Front View 9 Insert to Front View 7 Compact Flash emory Stick Type- I ,Type- II ,Type- II HDD Memory Stick(Include PRO) (DUO, PRO-DUO) Insert to Front View® Insert to Front View ® SD Card, SDHC Card xD Picture Card Type M, Type H Smart Media RS-MMC(Requires Adapter) Multi Media Card(MMC)

How to Connect Fan and Power Cable

This product is equipped with upper fan controller (Total 2) and removable lower fan controller (Total 4), and each fan controller has a separate power source.

☆How to Connect the Upper Part

Power source for the upper part is supplied by S-ATA power, and the power is shared for other front connecters and the fan controller. *If your PSU is not equipped with S-ATA power cable, please purchase the adapter on your own.


☆How to Connect the Lower Part

Power source for the lower part is supplied by Floppy Drive power.

XIf your PSU is not equipped with Floppy Drive power cable, please purchase the adapter on your own.

If you do not plan to use pulse sensor feature (Fan RPM detection), please connect the fan directly. If you plan to use the pulse sensor feature with your fan, please use the supplied fan cable to connect the fan.

*In order to use the pulse sensor feature, fan must be compatible to read the pulse. If not, the fan RPM will not be displayed.

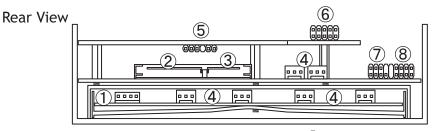

①Power Cable Connecter for Lower Part

2)S-ATA Power Connecter

3S-ATA Data Connecter

(4) Fan Cable Connecter

⑤Card Reader Pin 6 Audio, Mic, Line-In Pin ⑦IEEE1394 Cable Pin ®USB2.0 Cable Pin

the PSU. Please connect the S-ATA power cable to the @S-ATA power connecter.

To use the lower part of the fan controller (removable), please connect the Floppy

☆Supplied S-ATA power cable and S-ATA data cable are for connecting the S-ATA device to this product only. (Please make sure to firmly connect the cables)

Connect the male side (2-pin) to the fan connecter pin located on the motherboard.

Wrong connection can cause the damage to the product or surrounding devices.


If you do not connect the S-ATA power cable, the fan will not work.

Drive power cable to the ①Power cable connecter for lower part.

%2:Fan Cable Connection

Connect the female side (3-pin) to this product.

How to Connect Each Cable

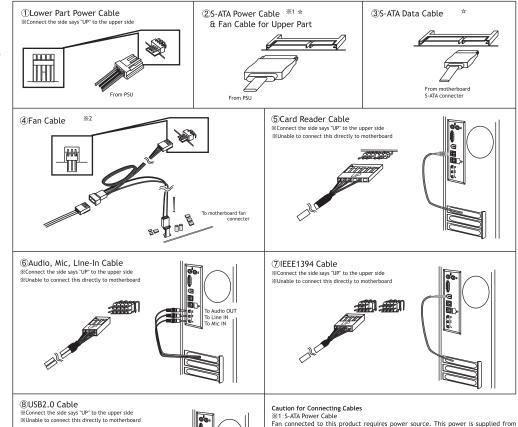

How to Connect the Optical Slim Drive *Depending on the type of slim optical drive, it may not be possible Depending on the type of slim optical drive, you may not need to use the spacer to mount. *Please make sure to mount the slim optical drive in the proper direction. \oplus ①Power Connecter 2Flat Cable Connecter 3Audio Cable Connecter Direction to Connect the Cable USB 2.0 IEEE1394 Lo_

1)FDD Power Cable

2IDE Flat Cable